


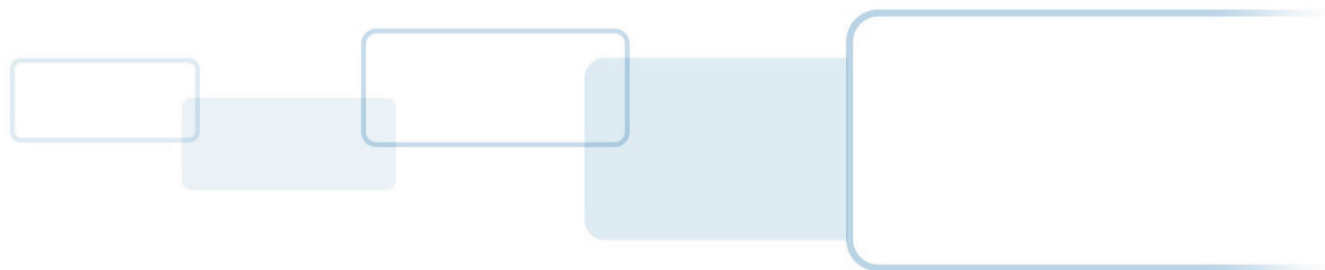

HID Mobile Access Reader Deployment Guide

For Site Administrators and Integrators

PLT-02076, Rev. A.0
October 2014





Contents

Contents	2
Copyright.....	4
Trademarks.....	4
Revision History.....	4
Contacts.....	4
1 Purpose	5
2 References	5
3 Background	5
3.1 HID iCLASS SE Mobile Access Readers.....	5
3.2 Seos.....	5
3.3 Bluetooth LE (BLE).....	6
3.3.1 Pairing.....	6
3.3.2 Power.....	6
3.3.3 Advertising Data.....	6
3.4 Near Field Communication.....	6
3.4.1 Storing Mobile ID in Android OS using Host Card Emulation.....	6
3.4.2 Storing Mobile ID in the Secure Element (SIM or handset provider).....	7
3.5 Types of Mobile Access Readers.....	7
3.5.1 Mobile-Enabled.....	7
3.5.2 Mobile-Ready.....	7
3.5.3 Mobile-Capable.....	7
4 Terminology	7
5 Operational Overview	8
5.1 BLE Benefits and Modes of Operation.....	8
5.2 Similarities between BLE and Contactless Proximity Credentials.....	8
5.3 Differences between BLE and Contactless Proximity Credentials.....	9
5.4 Mobile and Cards.....	9
5.5 Detecting and Authenticating BLE Devices.....	10
5.6 Comparison of Mobile Technologies BLE and NFC.....	10
6 Infrastructure Needs and Solution Capabilities	11
6.1 Reader Infrastructure.....	11
6.1.1 Site Survey.....	11
6.1.2 Determining by Mobile Device.....	11
6.1.3 Determine By Applications.....	11
6.2 Unusual Use Cases.....	11
6.2.1 125 kHz Indala Credential Support.....	11
6.2.2 First Version iCLASS SE (Rev D).....	12
6.2.3 Mobile-Ready Readers.....	12
6.2.4 Mobile-Capable Readers.....	12
7 Installer Deployment Preparation	13
7.1 Equipment List for Mobile-Enabled Readers.....	13
7.2 Additional Equipment when Converting Mobile-Ready Readers.....	13
7.2.1 Personalization Configuration Card.....	13
8 Environmental Considerations	14
8.1 Reader Form Factor.....	14
8.2 Reader Mounting Surface and Other Environmental Conditions.....	14
8.3 BLE Reader Metallic Insert with Adhesive (for Back Plate or Spacer).....	14

8.4 Mobile Device Make and Model	14
9 Installation Best Practices	15
9.1 Installation Workflow	15
9.2 BLE Configuration Tips	16
9.3 NFC (HCE) Configuration Tip.....	16
9.4 Visible Identification for Users and Installers	16
9.5 Troubleshooting	17
Appendix: A Reader Identification.....	18
A.1 25+ Years of Physical Access Readers	18
A.2 Finding Relevant Information on iCLASS SE Readers.....	18
A.2.1 Mobile-Capable Reader	18
A.2.2 Mobile-Enabled and Mobile-Ready Readers.....	18
Appendix: B Reader Ordering Instructions	19
B.1 Overview	19
B.1.1 Purchasing Mobile-Ready versus Mobile-Enabled	19
B.2 Mobile-Ready Reader Part Numbers.....	19
B.2.1 BLE and/or NFC, No Prox (125 kHz), Non-Keypad, Wiegand.....	20
B.2.2 BLE and/or NFC, No Prox (125 kHz), With Keypad, Wiegand.....	20
B.2.3 BLE and/or NFC, with Prox (125 kHz HID Prox), Non-Keypad, Wiegand	21
B.2.4 BLE and/or NFC, with Prox (125 kHz HID Prox), with Keypad, Wiegand	21
B.3 Reader Accessories	22
B.4 Configuration Summary	22
B.4.1 Form factor	22
B.4.2 Access Control Panel Interface	22
B.4.3 Access Control Panel Wiring Connection.....	23
B.4.4 Color.....	23
B.4.5 Audio/Visual Indication	24
B.4.6 Keypad.....	24
B.4.7 Card Compatibility	24
B.4.8 BLE Configuration.....	25
B.4.9 More Options.....	25



Copyright

©2014 HID Global Corporation/ASSA ABLOY AB.

All rights reserved. This document may not be reproduced, disseminated or republished in any form without the prior written permission of HID Global Corporation.

Trademarks

HID GLOBAL, HID, the HID logo, HID Mobile Access, iCLASS SE, multiCLASS SE, and Seos are the trademarks or registered trademarks of HID Global Corporation, or its licensors, in the U.S. and other countries.

Revision History

Date	Description	Version
10/1/14	Initial release	A.0

Contacts

For additional offices around the world, see www.hidglobal.com/contact.

North America

611 Center Ridge Drive
Austin, TX 78753
USA
Phone: 866-607-7339
Fax: 949 732 2120

Asia Pacific

19/F 625 King's Road
North Point, Island East
Hong Kong
Phone: 852 3160 9833
Fax: 852 3160 4809

Europe, Middle East and Africa

Haverhill Business Park Phoenix Road
Haverhill, Suffolk CB9 7AE
England
Phone: 44 (0) 1440 711 822
Fax: 44 (0) 1440 714 840

Brazil

Condomínio Business Center
Av. Ermano Marchetti, 1435
Galpão A2 CEP 05038001
Lapa - São Paulo/SP
Brazil
Phone: 55 11 5514-7100

HID Global Technical Support: support.hidglobal.com

1 Purpose

This document provides background, operational, infrastructure, and deployment, ordering and best practices information for site administrators and integrators deploying HID Mobile Access® readers.

2 References

This document references the following documents and resources:

Note: All HID Global Documents, can be found on the HID Mobile Access Portal.

- HID Mobile Access Overview Guide (PLT-02078)
- HID Mobile App User Guide (PLT-02077)
- HID Mobile Access Configuration Application User Guide (PLT-02075)
- iCLASS SE Installation Guide (PLT-01579), can be found at: www.hidglobal.com
- OSDP Specification - reference SIA website at <https://siamembers.siaonline.org> > SIA Open Supervised Device Protocol (OSDP)
- SE Configuration Guide for Mobile Access
See SSD-00311_B_SE-CONFIGURATION-GUIDE-Mobile.xlsx. This file is attached to this PDF. Select the paperclip icon on the left panel of the PDF file.

3 Background

This section provides general background information for HID's iCLASS SE® Mobile Access readers, a summary of key technology and common terms used throughout the document.

3.1 HID iCLASS SE Mobile Access Readers

HID iCLASS SE Mobile Access Readers are physical access wall mounted readers that read credentials (Mobile IDs) from mobile devices well as 13.56 MHz and 125 kHz contactless credentials. The reader achieves this by first securely reading a physical access card number and then transmitting the number to an access control panel. No special system modifications are required to read Mobile IDs. Existing Wiegand readers can easily be replaced and work with existing access control panel hardware.

3.2 Seos

Seos® is the fundamental technology that enables mobile devices to store and use Mobile IDs with iCLASS SE Mobile Access readers. Seos is a standards based software application (or "applet") which is run by microprocessor based contactless smart cards (iCLASS Seos cards) and mobile devices including those running iOS 7 (ex. iPhone 4S and later, iPad 3rd Generation, and later), Android 4.3 and 4.4 (ex. Samsung Galaxy S4 and Galaxy S5).

Seos takes the responsibility for storing and retrieving Mobile IDs in a secure, trusted and private manner. Seos operates independently of communication medium (ex. 13.56 MHz ISO14443A, 2.4 GHz BLE) allowing for a unified security platform across credentials using Bluetooth LE, NFC and contactless smart card communication. Without Seos, mobile access solutions are often dependent on platform-specific technology. This can have a negative impact on enabling the solution to work seamlessly across different credential technologies, including mobile devices.

3.3 Bluetooth LE (BLE)

Bluetooth Low Energy (BLE) is a communication medium that together with Seos enables BLE-enabled mobile devices to communicate with HID iCLASS SE Mobile readers using BLE. Today BLE is commonly found on many mobile devices, including those running iOS 7 (ex. iPhone 4S and later, iPad 3rd Generation and later), Android 4.3 and 4.4 (ex. Samsung Galaxy S4 and Galaxy S5). **Note:** Bluetooth Low Energy is also written as Bluetooth LE, and branded Bluetooth Smart.

BLE was designed and marketed by the Bluetooth Special Interest Group. The technology uses the same 2.4 GHz radio frequencies as Classic Bluetooth. Compared to Classic Bluetooth, BLE is intended to provide considerably reduced power consumption and cost while maintaining similar communication range.

3.3.1 Pairing

Unlike Classic Bluetooth, BLE removes the need to pair devices in order for them to communicate. This means the experience many have when attempting to make a mobile device work on a car stereo is not required to use Mobile IDs. Readers and Mobile IDs are uniquely manufactured with end customer specific security. This security enables all mobile devices supporting Seos, to work with all Mobile-Enabled readers without individual pairing activity on a per-reader and per-device basis. Lastly, HID Global's Seos technology provides the fundamental security mechanisms to protect the access control credential and individual's associated privacy.

3.3.2 Power

Power strength detected between the reader and mobile device enable the devices to "roughly" determine how far they are apart. There are various elements, described later in the document, that make the read range hard to exactly predict. A specific setting in Bluetooth devices is Receive Signal Strength Indication (RSSI), which is a measurement of the power present in a received radio signal.

3.3.3 Advertising Data

The technology found in iCLASS SE Mobile Access readers and associated Mobile IDs use a matching identifier to coordinate communication. The Mobile ID and reader must have matching identifiers in order for Physical Access Control System (PACS) transactions to occur. There are different identifiers for different brands of readers. Each identifier is coordinated with a unique device application; e.g. HID Mobile Access (HID), and ASSA ABLOY Mobile Access (ASSA).

3.4 Near Field Communication

Near Field Communication (NFC) is a 13.56 MHz-based radio frequency communication medium that, together with Seos, enables NFC-enabled devices to communicate with HID Mobile Enabled readers using NFC. NFC can be implemented in one of two ways.

3.4.1 Storing Mobile ID in Android OS using Host Card Emulation

Host Card Emulation (HCE) is a method to reproduce a contactless smart card using Android OS 4.4 and higher. This method allows the Mobile ID to not require a secure element for storage.

3.4.2 Storing Mobile ID in the Secure Element (SIM or handset provider)

Using this method, the Mobile Network Operator (MNO) or handset provider allows installation of a Mobile ID on a SIM card or handset. This method is currently not available from HID on the mobile handset side, therefore, not utilized by the reader.

3.5 Types of Mobile Access Readers

The following terminology will be used throughout the rest of the document to describe the variety of HID readers that come from the factory today, and are installed in the field previously.

3.5.1 Mobile-Enabled

A “Mobile-Enabled” reader is populated with all the necessary hardware and firmware to work with either PLE and/or NFC mobile devices, and has been personalized for use with a specific end user company’s Mobile IDs.

3.5.2 Mobile-Ready

A “Mobile-Ready” reader is prepared for use with Mobile IDs but lacks a specific company configuration. These readers are populated with all the necessary hardware and firmware to work with either BLE and/or NFC mobile devices, but lack the security synchronization for a specific end user company.

3.5.3 Mobile-Capable

A “Mobile-Capable” reader is built from the base iCLASS SE platform. The reader is not prepared with the necessary hardware and/or firmware to work with Mobile IDs. In the near future, it will be possible to upgrade these readers to support Mobile Access. Note that the exact processes and work instructions are still under development by HID Global.

4 Terminology

BLE	Bluetooth Low Energy (marketed under the name Bluetooth Smart)
HCE	Host Card Emulation
MNO	Mobile Network Operator
NFC	Near Field Communication
PACS	Physical Access Control Systems
RSSI	Receive Signal Strength Indication
Tap	Holding the mobile device near the reader.
Twist and Go	Twisting the mobile device in a door knob motion at a distance from the reader.

5 Operational Overview

This section focuses on BLE and NFC technology and how they generally operate within a Physical Access Control environment.

5.1 BLE Benefits and Modes of Operation

BLE provides convenient user interaction with iCLASS SE Mobile-enabled readers. BLE can enable a credential read between reader and mobile device at a nominal range of up to 32 ft (10m). **Note:** Many environmental and device specific dynamics will affect actual read ranges.

The BLE interface provides 2 modes of interaction:

- **Tap Mode:** The mobile device must be brought very close to or touching the reader (a similar user experience to that observed using Prox cards)
- **Twist and Go:** The mobile device holder must initiate the read by twisting the mobile device in using a sharp 90° rotation in either direction.

These modes of interaction are configured on a per reader basis via the HID Mobile Access Configuration Application. *Tap* mode is designed for use in locations where multiple readers are located near each other, or there is a higher probability for inadvertently opening of doors (for example: readers in a narrow hallway).

Due to the fact that *Twist and Go* operates at a longer range, and requires a specific user interaction, it is more conducive to environments where lone readers are installed (for example: readers at the end of a wide hallway or a single parking lot reader).

5.2 Similarities between BLE and Contactless Proximity Credentials

In the same way that the read range for contactless cards (125 kHz Prox and 13.56 MHz smart cards) is affected by the installation environment, the environment effects read range for BLE enabled devices.

For example, metallic surfaces will take energy away from the reader and thus will degrade the read range of both contactless card and BLE-enabled mobile devices. In the same way that the form factor of the credential (card, fob, tag) will yield different performance characteristics, BLE-enabled mobile devices have different antenna designs and software stacks, and will behave differently.

Likewise, form factors and hardware variations of the reader (mullion style, wall switch, with/without keypad, etc.) will vary performance.

The mobile device's specific BLE implementation along with its use of hardware impacts the observed read range. Therefore, it is important to test with more than one device type when configuring the reader settings, in order to yield the best user experience.

The user experience should also be tested with the other cards used in the building like iCLASS and HID Prox.

5.3 Differences between BLE and Contactless Proximity Credentials

- Unlike contactless cards, where read range is fixed, and only varies based on the environmental and design elements described earlier, BLE provides the ability to significantly adjust read range. BLE provides the ability to vary both the reader transmit power as well as RSSI thresholds, which together impact read range for *Tap* and *Twist and Go* modes of operation.
- The speed at which contactless proximity credentials authenticate is faster than BLE. However, the ability to initiate card reads from a longer range, and in stride while approaching a door, can significantly reduce any perceived performance delay, and in many cases, decrease the overall time to open a door.

5.4 Mobile and Cards

In order to easily migrate or coincide with existing card populations, HID readers support a variety of cards that include iCLASS Seos, iCLASS and HID Prox. Readers are specified to fit an end user organization's specific card compatibility needs, so both existing and future credentials technologies, including Mobile IDs, can be supported simultaneously.

The reader is setup to continuously attempt to read a list of credential types. For sites with both cards and mobile devices, the reader will attempt to handshake with an ordered list of credentials, example illustrated below:

- Read Mobile ID using BLE
- Read iCLASS Seos on card
- Read standard iCLASS on card
- Read HID Prox on card

The reader continuously polls, looking for any credentials that meet the specification. When the reader finds one of the credentials on the list, it attempts authentication, and if successful, reads and reports the card number to the access control panel.

5.5 Detecting and Authenticating BLE Devices

For the mobile device and reader to communicate the reader must be in the mobile device's *line of sight*. The line of sight is defined as the distance at which the mobile device can see a reader. This is a configurable setting in the reader via the HID Mobile Access Configuration Application. See *Section 2: References*, and the HID Mobile Access Configuration Application User Guide (PLT-02075), for detailed information.

The reader is constantly advertising its presence over BLE, therefore, once within line of sight, the BLE application on the mobile device is made aware of the reader's presence. The BLE application then discovers and confirms that it is permitted to communicate with the reader, using Advertising Data. See *Section 3.3.3: Advertising Data*.

Once the BLE application has confirmed that the reader is valid, and the mobile device is within the defined *Tap* or *Twist and Go* range, it will initiate a durable connection and run the authentication process. Provided that valid site specific security information is configured on the Mobile ID and the reader, authentication occurs. The Mobile ID is then read, and the card number is output to the access control panel.

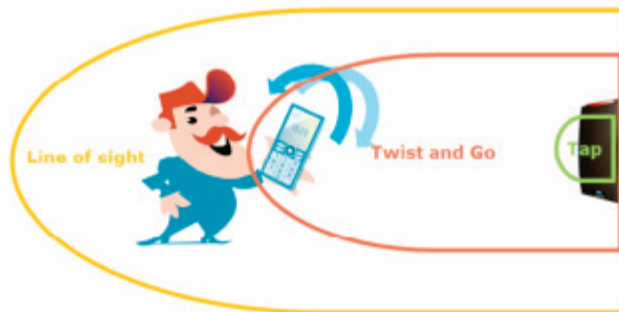


Figure 1: BLE Detection and Operational Zones

5.6 Comparison of Mobile Technologies BLE and NFC

A single technology, either BLE or NFC, will be chosen by the end user's organization as the Mobile Access enabling technology. While it is technically possible to turn on both BLE and NFC in an organization, enabling readers and mobile devices with both technologies may cause unexpected behavior.

Therefore, HID advises that one technology is chosen to work with all readers in cases where mobile devices will have both BLE and NFC enabled. The following table describes some best applications for *Tap* and *Twist and Go*.

BLE	NFC or BLE
Long Range (Twist and Go) <ul style="list-style-type: none"> • Garages • Car park gates • Warehouses • Hidden readers in less obtrusive places • Reader placed on secure/warmer side (protection against vandalism) 	Proximity (Tap) <ul style="list-style-type: none"> • Standard use case (most doors) • Meeting zones (many doors close by) • Combination security (ex. Mobile device + PIN) • "Tap-in" when counting transactions is required • Hallways

6 Infrastructure Needs and Solution Capabilities

6.1 Reader Infrastructure

6.1.1 Site Survey

Site surveys that review the inventory of readers installed on site are necessary to determine the infrastructure investment that an end user organization must deploy in order to use HID Mobile Access. HID's Mobile Access solution requires the new iCLASS SE Rev E readers from the factory. If the end user has already deployed the iCLASS SE Rev E readers, see *Section 6.2.4: Mobile-Capable Readers* for more information.

6.1.2 Determining by Mobile Device

Check mobile device populations for the relevant enabling technologies, BLE and NFC. BLE is a much more widespread technology, where NFC is available in only a subset of handsets. **Note:** Only the most current Android OS versions offer NFC via HCE. If you have a mixture of mobile devices, pick the greatest common factor, but remember, the iCLASS SE Mobile Access readers can read both BLE and NFC Mobile IDs simultaneously.

iPhone Only: iPhone 5S, 5 and 4S running iOS7 have BLE and do not have NFC. For this mobile device population, select BLE as the intended interface.

6.1.3 Determine By Applications

If the end user organization intends to use *Twist and Go* technology (for parking garages or other locations where long read range is required) then BLE must be used.

6.2 Unusual Use Cases

When reviewing an end user organization's requirements, the following use cases require special attention:

6.2.1 125 kHz Indala Credential Support

Issue: HID's iCLASS SE Mobile Access readers using BLE currently do not have compatibility with 125 kHz Indala Prox.

Solution:

- Adopt NFC compliant mobile devices and install HID iCLASS SE Mobile-Enabled using NFC readers.
or
- Re-badge Indala Prox population with iCLASS Seos, and install HID iCLASS SE Mobile-Enabled using BLE readers.

6.2.2 First Version iCLASS SE (Rev D)

Issue: The original version (Rev D) of iCLASS SE readers, shipped through Q1 of 2013. The Rev D readers were designed to support Near Field Communication (NFC) with mobile devices where the Mobile ID is stored on the SIM card. However, this version was not designed to support the latest technologies (Seos, Bluetooth, and Host-based Card Emulation), used by current handsets with HID Mobile Access. The majority of iCLASS SE Rev E readers shipped from the beginning of 2013 were designed to support these latest mobile technologies.

For more information on identifying readers, see *Section A.2: Finding Relevant Information on iCLASS SE Readers*.

Solution: Adopt the second version of iCLASS SE reader (Rev E) that supports BLE and Seos.

6.2.3 Mobile-Ready Readers

Issue: iCLASS SE Rev E readers that lack customer specific personalization. The readers were deployed by end user organizations that wanted to move to mobile but did not move to Mobile IDs during initial installation.

Readers installed in the field that are ‘Mobile-Ready’ will require personalization / upgrade to become fully ready for Mobile Access. See *Section A.2: Finding Relevant Information on iCLASS SE Readers* for more information on identifying readers.

Solution: When the end user moves to adopt HID Mobile Access, they will be taken through an onboarding process that will produce personalized RFID configuration cards. When presented to the readers in the field, these cards will program customer specific security settings in the reader, enabling them to authenticate using Mobile IDs.

6.2.4 Mobile-Capable Readers

Issue: These iCLASS SE Rev E readers lack the base mobile platform components that enable the reader to work with Mobile IDs. A combination of hardware and/or firmware and personalization will need to be applied to the reader in order to prepare it for HID Mobile Access. See *Section A.2: Finding Relevant Information on iCLASS SE Readers* for more information on identifying readers.

Solution: This solution is currently in design, with expected release to occur in 2015.

7 Installer Deployment Preparation

7.1 Equipment List for Mobile-Enabled Readers

- **Cards for Backward Compatibility Testing**

Ensure you have end user organization cards that will enable access grants in the access control system.

- **Handsets for Mobile ID Testing**

Determine the mobile handsets manufacturers / model numbers that will be utilized by end users.

Ensure that you have representative samples of these devices. If you or your company does not have access to the same handset model during installation, then your company may need assistance from the end user organization to source appropriate test devices.

- **Mobile Admin Card**

The *Mobile Admin* card is a site-specific security card that enables the reader to be placed into a configuration mode. Once the reader is in the configuration mode, the *HID Mobile Access Configuration Application* on an Android device is used to adjust BLE settings.

After completing the onboarding process the site administrator will be sent five (5) *Mobile Admin* cards for site configuration. Subsequent *Mobile Admin* cards can be obtained by ordering your site's specific *Mobile Admin* cards. The part number of these cards is present on first invoice sent during mobile onboarding and starts with "SEC9X-CRD-MAD-".

- **Mobile Device for Configuration**

The HID Mobile Access Configuration Application requires a device running Android (OS version 4.3 or above). Ensure you have access to such a device, as this is required to configure readers during the installation process.

See the *HID Mobile Access Configuration Application User Manual* (PLT-02075) for information on how to receive, install and configure the *HID Mobile Access Configuration Application*.

Note: This application will not work with a reader unless the site specific *Mobile Admin* card has been presented to the reader.

7.2 Additional Equipment when Converting Mobile-Ready Readers

7.2.1 Personalization Configuration Card

This RFID configuration card is presented to the reader within the first 5 seconds of reader boot, and configures all the customer-specific information into the reader. This card turns a Mobile-Ready reader into a Mobile-Enabled reader.

Note: These cards will be provided as a deliverable of the onboarding process.

8 Environmental Considerations

8.1 Reader Form Factor

Variances in antenna size, placement and the overall electrical design of the reader will impact the performance of the reader. Therefore it is likely a site with readers of multiple form factors will have different actual performance, even if all readers have the same configuration. To get the most consistent performance possible, range settings may need to be adjusted per form factor.

8.2 Reader Mounting Surface and Other Environmental Conditions

The surface the reader mounts on will impact performance. Metal takes power away from RF fields and thus decreases read ranges. This is true not only for BLE devices but contactless credentials as well. Plastic spacers (of 0.5" and 1.0", reader form factor dependent) can be used to space the reader away from metallic surfaces and reduce the impact the metal will have on read range. To get the most consistent performance possible, spacers and or range settings may need to be applied / adjusted per mounting situation / form factor. See *Section B.3: Reader Accessories* for order information.

8.3 BLE Reader Metallic Insert with Adhesive (for Back Plate or Spacer)

The HID Mobile Access reader is designed with a composite metallic insert that enables directionality of the BLE energy coming from the reader. The metallic insert must be used in order to avoid inadvertently opening doors from behind (on the secure side) of the door. When using spacers, order metallic inserts separately and adhere them to the spacer during installation. See *Section B.3: Reader Accessories* for order information.

8.4 Mobile Device Make and Model

Variances in OS version, antenna size, placement and the overall electrical design of the mobile device will impact performance. This means that users at one site using handsets from multiple manufacturers may experience different performance based on the mobile device used.

HID Mobile Access Configuration App compatibility information: See HID Mobile Access Configuration Application User Guide (PLT-02075).

HID Mobile Access App compatibility information: See HID Mobile Access Frequently Asked Questions (PLT-02085).

9 Installation Best Practices

9.1 Installation Workflow

1. Install New Reader or Replace Existing Reader

Use the standard reader installation practices to install a new reader or replace an existing reader. **Note:** Pay careful attention to the metal CAN/module in the back of the reader; it must be firmly inserted in the connector on the back of the reader. Re-seat if necessary.

2. Test with Existing Credentials

If there are existing credentials on the site, test these credentials and the new reader. Ensure the credential has compatibility all the way through the system by confirming an access grant (credential must have access rights).

3. Test with Mobile ID

Test with all mobile devices. The default test will be with BLE or NFC in a *Tap* mode. Ensure all Mobile IDs have compatibility all the way through the system by confirming an access grant (Mobile IDs must be enrolled in the system and have access rights).

4. Configure for Location and Environment

If more or less *Tap* read range is desired, or if *Twist and Go* operation is desired, using the HID Mobile Access Configuration Application.

- Scan for Readers
- Connect to the reader
- Adjust the reader settings
- Use the *Mobile Admin* card to place the reader into a configuration mode
- Apply changes

9.2 BLE Configuration Tips

Use the following tips to guide configuration setup of a site:

- Keep *Tap* value at the lowest (default) setting to avoid multiple/unintended reads.
- Use *Tap* only in environments where readers are nearby each other.
- Use *Tap* only in environments where readers are located in narrow hallways.
- Use *Tap* only when with a keypad reader.
- Use *Twist and Go* in parking garages.
- Use *Twist and Go* for doors where readers are located away from the opening (i.e. large doorway openings in manufacturing warehouses or hospitals).
- Keep the *Twist and Go* experience consistent, so that users can learn how the *Twist and Go* behaves (i.e. the same read range for *Twist and Go*)
- Mark readers where you allow *Twist and Go*. See *Section 9.4: Visible Identification for Users and Installers*.
- Use *Tap* only if unsure of settings to use – *Tap* provides the most consistent user experience, used in closer proximity to the reader, minimizing the risk of false door openings.
- Train a group of super users – make them a part of the new technology. Expert users aid in an installation with optimal performance, and help the less trained users understand the expected experience of the new technology.

9.3 NFC (HCE) Configuration Tip

The HCE options (Configuration Settings > Operation Modes) should always be enabled, when using RFID cards and/or NFC. The setting is designed to pick the faster NFC communication channel (compared to BLE) when a mobile device supports both NFC and BLE.

9.4 Visible Identification for Users and Installers

Training users on the new Mobile ID interaction can be aided by marking the readers which are Mobile-Enabled. Suggested methods for marking readers include:

- **Turn default LED to blue:** This works in environments where the default LED (when card reads are not in progress) is controlled by the reader, and where you must train users on the new interaction methods particular with readers. The ability to change the LED can be achieved by ordering a configuration card that specifically has a default blue LED from HID Global, or when specifying requirements for Mobile-Enabled end item parts, when working with HID Global.
- **Label reader with small colored dot:** Colored dots can be picked up at any office supply store. Once users learn the interaction requirements with specific readers (i.e. over the course of walking through a door a dozen times), search and acknowledgement of the label is no longer required.

The above methods can also help installers needing to identify populations.

9.5 Troubleshooting

Symptom: Mobile IDs are not producing any visible reader interaction (i.e. no LED state change).

Causes:

- **Personalization** - reader is not personalized with end user organization specific setup, including security.
- Module not plugged in properly to the back of the reader (BLE only) - upon reader boot-up, if the module is plugged in properly the reader LED will display magenta > blue flash > magenta (for 5 seconds). If you do not see the LED blue flash, check to ensure the BLE module is connected.

Appendix: A Reader Identification

A.1 25+ Years of Physical Access Readers

HID Global has manufactured a variety of readers (iCLASS, FlexSmartID, HID Prox, Indala Prox, SmartID, iCLASS SE), along with other vendors. The HID mobile-capable readers are all built from the iCLASS SE platform (Rev E). If you have readers that are “HID Prox”, “iCLASS” (not “iCLASS SE”), “Smart ID” and other terms not equivalent to “iCLASS SE”, you have identified readers that are not mobile-capable. If you do have iCLASS SE readers, continue reading this section to identify what type of reader you do have.

A.2 Finding Relevant Information on iCLASS SE Readers

The following reader identification sections will reference one of two part numbers found on iCLASS SE readers.

- The reader orderable part number, which can be found on POs, invoices, HID sales orders or the reader label on the back side of the reader. iCLASS SE part numbers all start with a three digit number that starts with the number 9 (**9xx**).
- The reader internal configuration part number, which can only be found on the reader label, on the back side of the reader. **iCLASS SE**

The remainder of this section will focus on identifying iCLASS SE readers.

A.2.1 Mobile-Capable Reader

All mobile-capable readers are the iCLASS SE Rev E readers. Identify this version of reader via part number, either on POs, invoices or the reader label on inside of the reader. Part numbers that have an **A** in the eighth digit are the iCLASS SE Rev D readers, whereas part numbers that have an **E** in the eighth digit are the iCLASS SE Rev E readers.

- **Rev D Example:** 900NTNNAK00000
- **Rev E Example:** 900NTNNEK00000

A.2.2 Mobile-Enabled and Mobile-Ready Readers

All Mobile-Enabled and Mobile-Ready readers will have a part number that contains the letter M in the fifth character location.

- **Example:** 920PMNNEKMA010

Appendix: B Reader Ordering Instructions

B.1 Overview

This section is designed to communicate part numbers for the most popular iCLASS SE and multiCLASS SE Mobile-Ready access control readers.

B.1.1 Purchasing Mobile-Ready versus Mobile-Enabled

Purchase Mobile-Ready readers when the end user organization knows they want to go to mobile in the future. If the end user organization is going through mobile on-boarding and planning deployment of Mobile IDs, then purchase Mobile-Enabled readers.

B.2 Mobile-Ready Reader Part Numbers

Mobile-ready part numbers are offered to all resellers of HID Mobile Access and are included in this section. Mobile-enabled part numbers are custom per end user requirements, and are not included in this section. The part numbers are created as part of the end-user mobile on-boarding process. Contact your HID Global representative for more information on this process.

All Mobile-Ready reader orders must contain the following information:

- Form Factor
- Wiring Connection
- Color

All readers in this document come with default configuration. For more details see Section *B.4: Configuration Summary*.



B.2.1 BLE and/or NFC, No Prox (125 kHz), Non-Keypad, Wiegand

1. Select one option from each section below.

Form Factor

- 900** - Small Mullion Non-Keypad, Model R10
- 910** - Large Mullion Non-Keypad, Model R15
- 920** - Wall Switch Non-Keypad for US Single-Gang J-Box, Model R40
- 930** - EU Square for 60mm Round J-Box, Model R30

Wiring Connection

- N** - Pigtail
- T** - Terminal strip

Color

- K** - Black
- G** - Gray

2. Enter the numbers/letters from the selections above into the table below. The resulting “Final Part Number” is used for ordering reader.

	Form Factor		Wiring Connection	Color		
Example	900	NMN	N	K	EM	A001
Final Part Number		NMN			EM	A001

3. Enter the resulting final part number in your purchase order.

B.2.2 BLE and/or NFC, No Prox (125 kHz), With Keypad, Wiegand

1. Select one option from each section below.

Form Factor

- 921** - Wall Switch Keypad for US Single-Gang J-Box, Model RK40

Wiring Connection

- N** - Pigtail
- T** - Terminal strip

Color

- K** - Black
- G** - Gray

2. Enter the numbers/letters from the selections above into the table below. The resulting “Final Part Number” is used for ordering the reader.

	Form Factor		Wiring Connection	Color		
Example	921	NMN	N	K	EM	A002
Final Part Number	921	NMN			EM	A002

3. Enter the resulting final part number on your purchase order.

B.2.3 BLE and/or NFC, with Prox (125 kHz HID Prox), Non-Keypad, Wiegand

1. Select one option from each section below.

Form Factor

- 900** - Small Mullion Non-Keypad, Model RP10
- 910** - Large Mullion Non-Keypad, Model RP15
- 920** - Wall Switch Non-Keypad for US Single-Gang J-Box, Model RP40
- 930** - EU Square for 60mm Round J-Box, Model RP30

Wiring Connection

- N** - Pigtail
- T** - Terminal strip

Color

- K** - Black
- G** - Gray

2. Enter the numbers/letters from the selections above into the table below. The resulting "Final Part Number" is used for ordering the reader.

	Form Factor		Wiring Connection	Color		
Example	900	PMN	N	K	EM	A003
Final Part Number		PMN			EM	A003

3. Enter the resulting final part number on your purchase order.

B.2.4 BLE and/or NFC, with Prox (125 kHz HID Prox), with Keypad, Wiegand

1. Select a Wiring Connection and Color option from the sections below.

Form Factor

- 921** - Wall Switch Keypad for US Single-Gang J-Box, Model RPK40

Wiring Connection

- N** - Pigtail
- T** - Terminal strip

Color

- K** - Black
- G** - Gray

2. Enter the numbers/letters from the selections above into the table below. The resulting "Final Part Number" is used for ordering the reader.

	Form Factor		Wiring Connection	Color		
Example	921	PMN	N	K	EM	A004
Final Part Number	921	PMN			EM	A004

3. Enter the resulting final part number on your purchase order.

B.3 Reader Accessories

The following accessories, mentioned earlier in this document, can be ordered to support installations.

Description	Applicable Reader Models	Part Number
Spacer	R10, RP10	6132AKB (Black) 6132AGB (Gray)
	R15, RP15	6132AKC (Black) 6132AGC (Gray)
	R30, RP30	6132AKD (Black) 6132AGD (Gray)
	R40, RP40	6132AKE (Black) 6132AGE (Gray)
	RK40, RPK40	6132AK (Black) 6132AG (Gray)
Metallic Insert with Adhesive (order in conjunction with spacer)	R10, RP10	MME-00118
	R15, RP15	MME-00119
	R30, RP30	MME-00120
	R40, RP40	MME-00121
	RK40, RPK40	MME-00122

B.4 Configuration Summary

This section summarizes details of hardware and capability configuration that comes with iCLASS SE Mobile Access readers.

B.4.1 Form factor

Readers come in a variety of models, including those that mount on a metal door mullion or directly onto a wall. HID Global offers the following form factors:

- **Short mullion, model R10** - a mount that takes up the smallest X and Y surface
- **Long mullion, model R15** - when replacing HID MiniProx
- **US J-Box, model R40** - when mounting to wall and covering up US single-gang J-Box
- **EU J-Box, model R30** - when mounting to wall and covering up 60mm round J-Box


B.4.2 Access Control Panel Interface

Card data is output to the panel using the Wiegand protocol, a de-facto reader/controller interface made popular by HID Global in the 1990's. This protocol is unidirectional and unsecure, but offers a high level of compatibility in the access control industry, and thus is used frequently. More options for bi-directional and secure communication between reader and controller are available using the Open Supervised Device Protocol (OSDP), a half-duplex RS-485 protocol. For more information see the OSDP specification in *Section 2: References*.

All Mobile-Ready readers in the order section of this document are Wiegand readers.


B.4.3 Access Control Panel Wiring Connection

Readers include two primary wiring connection options for the physical connection between reader and panel that include a terminal strip or a pigtail of individual conductors.

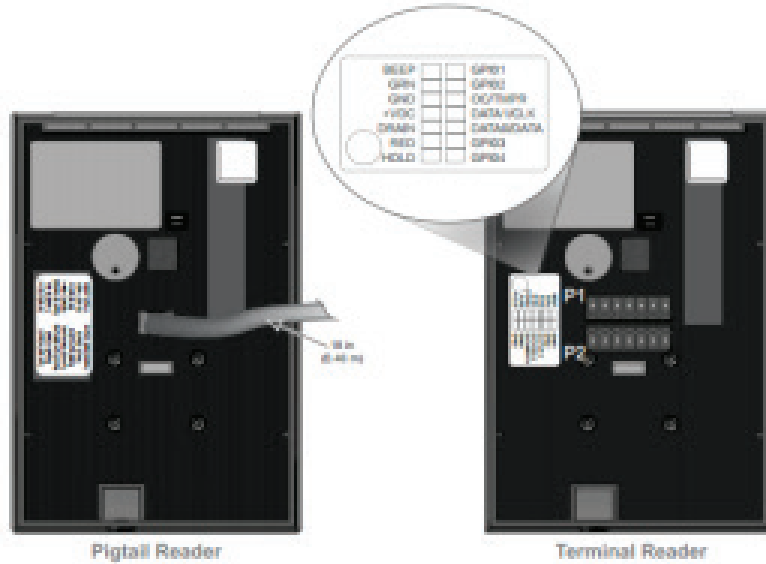

B.4.4 Color

Readers come in two colors, black or gray. The readers are a two piece design that consists of the mounting plate and reader electronics/cover. **Note:** Covers are not interchangeable or replaceable, without changing out the entire reader (cover and electronics).

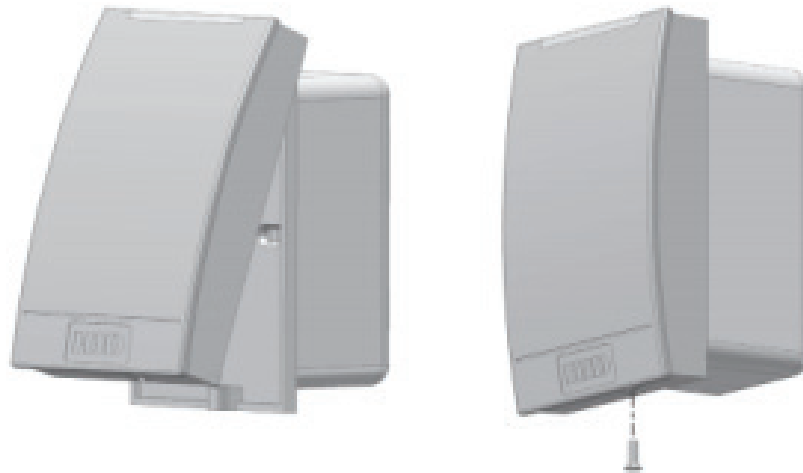

For more information on installation specific topics, see the HID Global iCLASS SE Installation Guide.

B.4.5 Audio/Visual Indication

During card processing, the reader will exhibit indications of progress from visual (LED) and audio (beeper) controls on the reader. Some access control panel models and configurations require certain LED and beeper configuration for system compatibility. Contact your access control panel manufacturer to obtain the correct settings.

All Mobile-Ready readers in the order section of this document are LED always Red when not processing a card, readers beeper sounds and LED flashes green when card is read. .

B.4.6 Keypad

Some reader models can be ordered with a keypad. The keypad enables two factor authentication – something you have (the card) and something you know (a PIN). Some access control panel models and configurations require certain keypad configuration for system compatibility. Contact your access control panel manufacturer to obtain the correct settings.

All Mobile-Ready keypad readers in the order section of this document output 4-bit burst per key press.

B.4.7 Card Compatibility

iCLASS SE Mobile-Ready readers attempt to read the following 13.56 MHz credentials:

Frequency	Credential Type	Description
13.56 MHz	standard iCLASS	iCLASS cards shipping since 2003
13.56 MHz	iCLASS SR	Like a multi-tech card that can bridge between standard iCLASS and iCLASS SE readers
13.56 MHz	iCLASS SE	iCLASS card with the highest security on a memory based iCLASS smart card
13.56 MHz	iCLASS Seos	iCLASS card with the highest security on the newest microprocessor based smart card
13.56 MHz	SIO-Enabled Technology for DESFire	Extra security layer, the SIO, on DESFire EV1 cards
13.56 MHz	SIO-Enabled Technology for MIFARE	Extra security layer, the SIO, on MIFARE Classic cards
13.56 MHz	MIFARE CSN	CSN output from a MIFARE card

Additionally, multiCLASS SE readers attempt the following 125 kHz credentials:

Frequency	Credential Type	Description
125 kHz	HID Prox	HID's cards selling since the 1990's
125 kHz	AWID	AWID and "Lenel Prox" cards, found mostly in NAM
125 kHz	EM4102	EM4102 cards, found mostly in EMEA

Once personalized in the field with end customer specific configuration, the (now) Mobile-Enabled readers additionally attempt to read the following mobile credentials:

Frequency	Credential Type	Description
2.4 GHz	Mobile ID	Mobile ID using BLE
13.56 MHz	Mobile ID	Mobile ID using NFC
13.56 MHz	Mobile Configuration	Mobile Admin Card (security card that sets up configuration session with mobile device app)
2.4 GHz	Mobile Configuration	Mobile Configuration Phone App (requires a <i>Mobile Admin</i> card to setup configuration session)

B.4.8 BLE Configuration

Mobile-Enabled readers can have BLE configuration personalized different than the default that ships with Mobile-Ready readers (Tap-On, Twist and Go-Off). One BLE configuration is allowed per end user organization. Additional adjustments can be made using the HID Mobile Access Configuration Application.

B.4.9 More Options

More order options, including additional Mobile-Ready readers with alternate configurations (ex. with OSDP communication) as well as a specification sheet to define end user organization needs can be found in the SE Configuration Guide for Mobile, see *Section 2: References*.

